



THE MARKET'S BEST HINGE STYLE RELEASE.

FEATURES OUR PATENT-PENDING MICRO-ADJUSTABLE SEAR SYSTEM.
SIMPLY, ADJUST THE SEAR FOR MORE OR LESS TRAVEL WITH THE
USE OF A HEX KEY. THE BGPRO IS A SOLID BRASS HANDLE THAT
PROVIDES WEIGHT AND BALANCE FOR A SMOOTH ROTATION. ALL NEW
GEOMETRY FOR LEVERAGE IS BUILT INTO THE BGPRO FOR SHOT-TOSHOT REPEATABILITY. THE HANDLE ALSO FEATURES OUR PATENTED
STAR DRIVE SYSTEM, WHICH ALLOWS FOR A THREE OR FOUR FINGER
SHAPE WITH MULTIPLE POSITIONS AVALIABLE.

COMPLETE INSTRUCTIONS INCLUDED INSIDE PAGKAGE.

PATENTED DESIGN AND A PATENT PENDING.

101 TUG BRANCH ROAD CLAY CITY, KY / 40312

B3ARCHERY.COM 606.612.5215





MICRO ADJUST SEAR

THREE OR FOUR FINGER DESIGN



ADJUSTABLE HANDLE

> BRASS FINISH



Adjustment Instructions

Travel Adjustment

- TO MICRO ADJUST THE SEAR, LOOSEN SET SCREW IN FIG. 2 AND TIGHTEN SET SCREW IN FIG. 3 FOR LESS TRAVEL.
- 2. TO MICRO ADJUST THE SEAR, LOOSEN SET SCREW IN FIG. 3 AND TIGHTEN SET SCREW IN FIG. 2 FOR MORE TRAVEL.
- 3. SET SCREW IN FIG. 1 IS AN OPTIONAL SEAR LOCK. IF YOU LOCK THIS DOWN YOU CANNOT ADJUST THE SEAR.

DO NOT OVERTIGHTEN.

PLEASE TEST AFTER ANY ADJUSTMENT.

Changing Sears

- 1. TO CHANGE SEAR, LOOSEN ALL THREE SET SCREWS (SEE FIG.1, FIG. 2, FIG. 3) AND BACK OUT THE FLAT HEAD SCREW (SEE FIG. 4).
- 2. Next, change your sear and re-install the flat head screw (see Fig. 4).
- 3. Now, make necessary adjustments and re-tighten set screws (see Fig.2, Fig.3).
- 4. USE HOT SEAR FOR LESS TRAVEL AND COLD SEAR FOR MORE TRAVEL.

DO NOT OVERTIGHTEN.


PLEASE TEST AFTER ANY ADJUSTMENT.

To Change Finger Locations and/or Arms

- 1. REMOVE THE 6-32 x 3/8 SCREW.
- 2. MOVE FINGER PIECE TO DESIRED LOCATION AND RE-TIGHTEN THE 6-32 x 3/8 SCREW.

DO NOT OVERTIGHTEN.

PLEASE TEST AFTER ANY ADJUSTMENT.

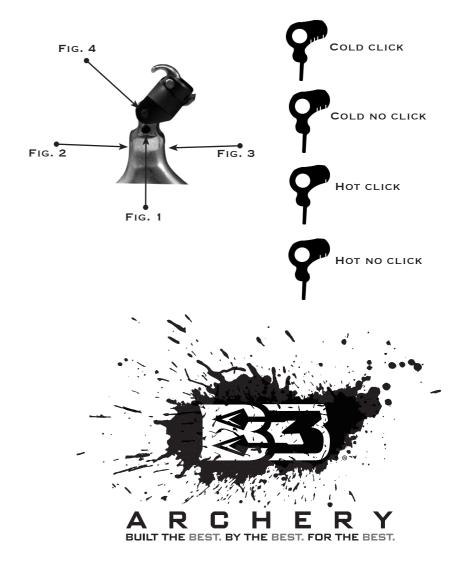

101 TUG BRANCH ROAD / CLAY CITY, KY / 40312 B3ARCHERY.COM / 606.612.5215

