



ARCHERY

BUILT THE **BEST**. BY THE **BEST**. FOR THE **BEST**.

inföty PRO

OUR MOST INNOVATIVE BACK-TENSION RELEASE.

FEATURES A PATENT-PENDING MICRO-ADJUSTABLE SEAR SYSTEM. SIMPLY, ADJUST THE SEAR FOR MORE OR LESS TRAVEL WITH THE USE OF A HEX KEY. THE INFINITY PRO PROVIDES WEIGHT AND BALANCE FOR A SMOOTH ROTATION. ALL NEW GEOMETRY FOR LEVERAGE IS BUILT INTO THE INFINITY PRO FOR SHOT-TO-SHOT REPEATABILITY. THE HANDLE ALSO FEATURES OUR PATENTED STAR DRIVE SYSTEM, WHICH ALLOWS FOR MULTIPLE SHAPES AND OR POSITIONS.

COMPLETE INSTRUCTIONS INCLUDED INSIDE PACKAGE.
PATENTED DESIGN AND A PATENT PENDING.

101 TUG BRANCH ROAD
CLAY CITY, KY / 40312

B3ARCHERY.COM
606.612.5215



ARCHERY

BUILT THE **BEST**. BY THE **BEST**. FOR THE **BEST**.

- STAINLESS
- BRASS

inföty PRO

MICRO ADJUST
SEAR

ADJUSTABLE
HANDLE



RELEASES • BROADHEADS • SIGHTS

Adjustment Instructions

Travel Adjustment

1. TO MICRO ADJUST THE SEAR, LOOSEN SET SCREW IN FIG. 2 AND TIGHTEN SET SCREW IN FIG. 3 FOR **LESS** TRAVEL.
2. TO MICRO ADJUST THE SEAR, LOOSEN SET SCREW IN FIG. 3 AND TIGHTEN SET SCREW IN FIG. 2 FOR **MORE** TRAVEL.
3. SET SCREW IN FIG. 1 IS AN OPTIONAL SEAR LOCK. IF YOU LOCK THIS DOWN YOU CANNOT ADJUST THE SEAR.

PLEASE TEST AFTER ANY ADJUSTMENT.

DO NOT OVERTIGHTEN.

Changing Sear

1. TO CHANGE SEAR, LOOSEN ALL THREE SET SCREWS (SEE FIG.1, FIG. 2, FIG. 3) AND BACK OUT THE FLAT HEAD SCREW (SEE FIG. 4).
2. NEXT, CHANGE YOUR SEAR AND RE-INSTALL THE FLAT HEAD SCREW (SEE FIG. 4).
3. NOW, MAKE NECESSARY ADJUSTMENTS AND RE-TIGHTEN SET SCREWS (SEE FIG.2, FIG.3).
4. USE HOT SEAR FOR LESS TRAVEL AND COLD SEAR FOR MORE TRAVEL.

PLEASE TEST AFTER ANY ADJUSTMENT.


DO NOT OVERTIGHTEN.

To Change Finger Locations and/or Arms

1. REMOVE THE 6-32 X 3/8 SCREW.
2. MOVE FINGER PIECE TO DESIRED LOCATION AND RE-TIGHTEN THE 6-32 X 3/8 SCREW.

PLEASE TEST AFTER ANY ADJUSTMENT.

DO NOT OVERTIGHTEN.

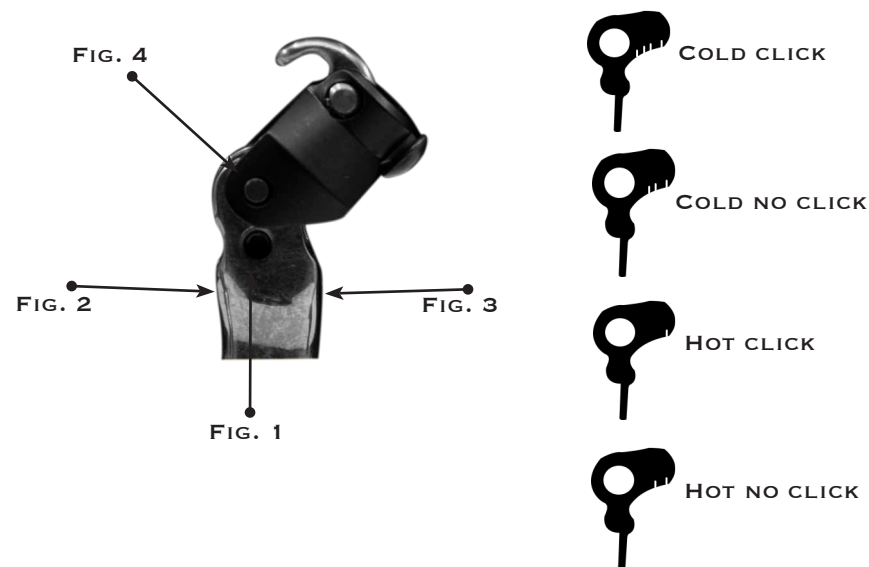

101 TUG BRANCH ROAD / CLAY CITY, KY / 40312
B3ARCHERY.COM / 606.612.5215

